




PRODUCT DATASHEET

Notecarrier Datasheet

Notecarrier XI v1.4

Notecarrier XI is the companion Notecarrier for Starnote for Iridium and Notecard, providing a platform for prototyping with satellite failover. It includes an onboard cellular antenna for Notecard, supercapacitors that supply the Iridium satellite modem during transmit bursts, and JST connectors for a LiPo battery and solar panel with onboard charging.

Blues Notecarrier® Datasheet: Notecarrier XI v1.4

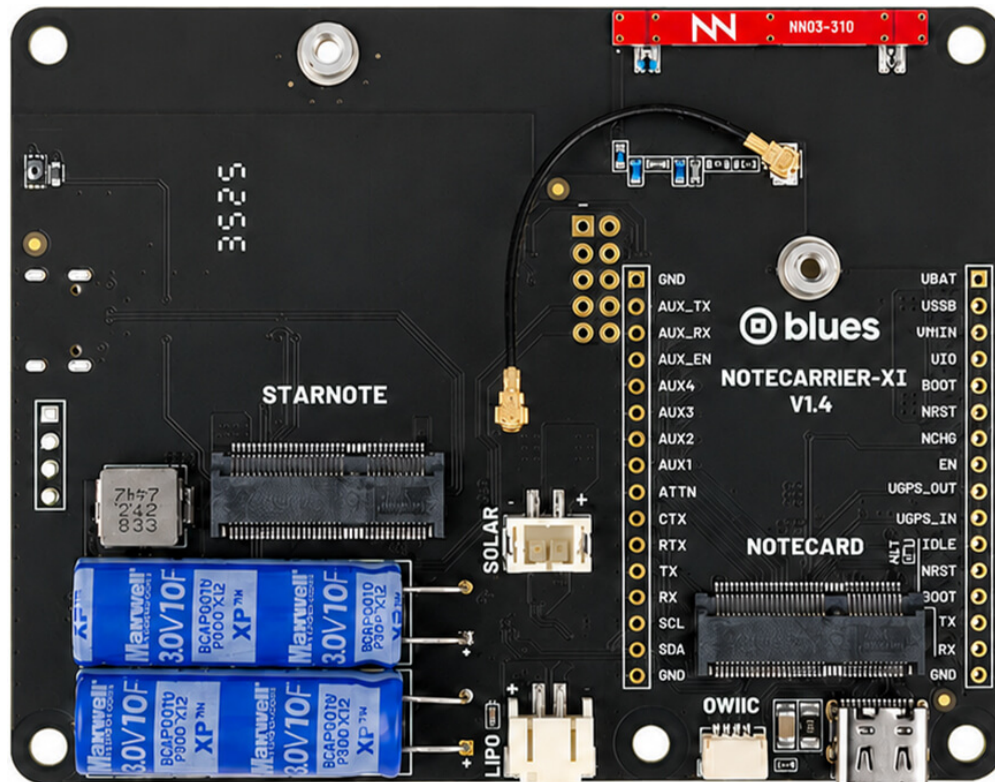

Functional Description

Notecarriers are available in multiple form factors to support rapid development across a range of use cases. Depending on the variant, a Notecarrier may prioritize direct host integration, compact size, integrated cellular/WiFi and GNSS antennas, or the ability to be soldered directly into a low-volume production design.

Notecarriers are explicitly designed to bridge the gap between early prototyping and a production-ready Notecard-based solution. In a final product, the Notecard is typically socketed directly onto a custom PCB via an edge connector, alongside the customer's MCU, sensors, and supporting circuitry. While this approach provides maximum flexibility and modularity, it can significantly increase the effort required during initial development and validation.

To simplify this process, Notecarriers expose the Notecard's interfaces through convenient breakout connections and integrate essential supporting circuitry, including power regulation, protection, and signal conditioning. This allows developers to focus on firmware, connectivity, and system behavior without first designing a complete custom carrier board.

Features

- **Simple.** Provides breadboard compatible pins or solderable mask for direct connections.
- **Compatible.** Level shifters ensure compatibility with 3.3V or 5V equipment.
- **Convenient.** Powered by a USB connector (requires 2A supply).
- **GPS Ready.** Models are either active GPS compatible, or feature a built-in antenna to enable GNSS connectivity.

Compatible Notecards


Since the **Notecarrier XI v1.4** is designed to be used with Starnote for Iridium for satellite connectivity, the **Notecarrier XI v1.4** is only compatible with the following Notecards:

- [Notecard Cell+WiFi](#) 
- [Notecard Cellular](#) 
- [Notecard Cellular \(Legacy\)](#) 
- [Notecard WiFi](#) 

Package Configuration

Notecarrier XI (Satellite) v1.4

Notecarrier XI (CARR-XI) is the companion Notecarrier for [Starnote for Iridium](#) and Notecard, providing a platform for prototyping with satellite failover.

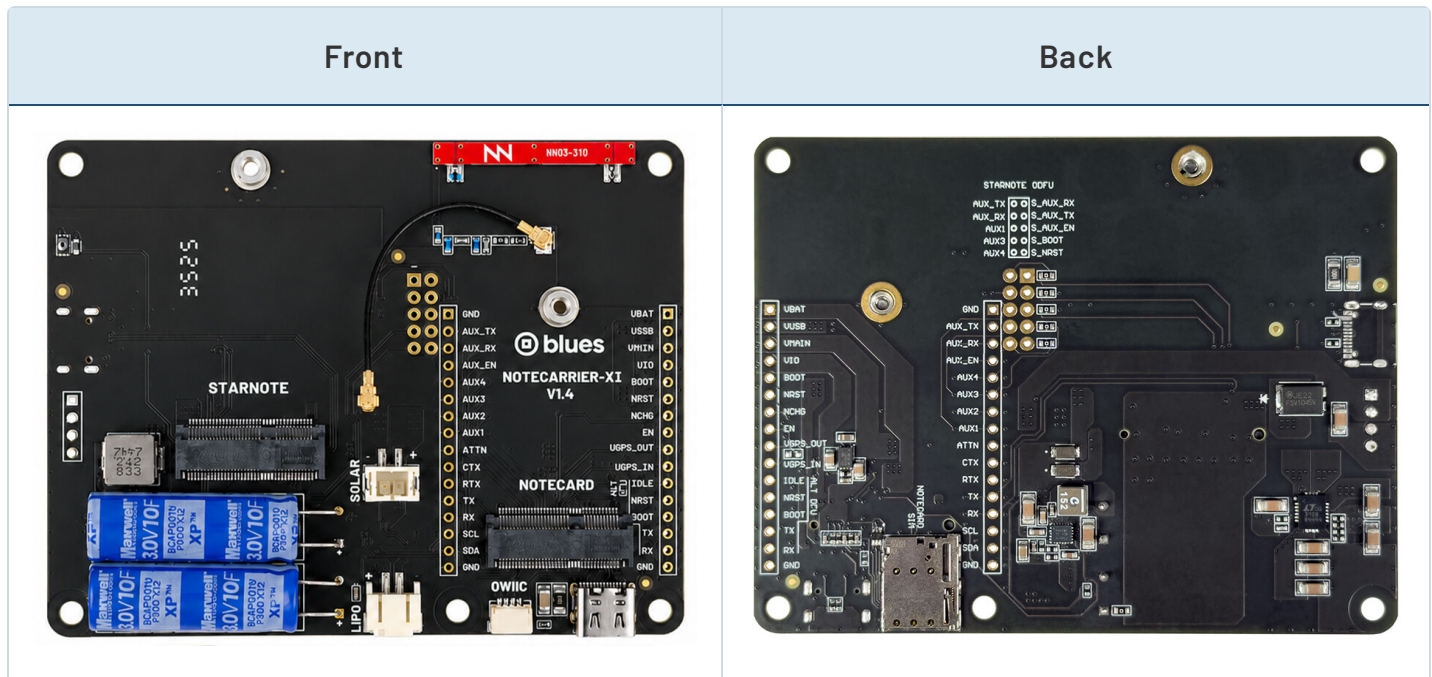

- [Notecard and Starnote for Iridium edge connector sockets](#) and [mounting screw receptacles](#).
 - **NOTE:** Blues recommends using nylon screws instead of stainless steel (SST) screws when mounting the Notecarrier XI.
- Two USB-C ports to power the Notecarrier and provide a USB Serial command interface (one to Notecard and one to Starnote for Iridium).
- Onboard cellular/LTE antenna (Ignion NN03-310) for Notecard.
- Requires a single user-provided U.FL Iridium-certified antenna for Starnote for Iridium, which serves both satellite and GPS/GNSS connectivity.
- Supports an optional U.FL passive GPS antenna for Notecard. [See this note](#) about using an active GPS antenna with Notecarrier XI.
- JST PH connector for a LiPo battery, with onboard LiPo charging circuit.

- Solar panel input (**SOLAR** JST connector and **VSOLAR** header) for solar-assisted charging.
- Onboard supercapacitors with a supercapacitor charging circuit to supply the Starnote for Iridium's satellite modem during transmit bursts.
- Qwiic connector for connecting I2C peripherals.
- External Nano-SIM slot for use of an optional secondary SIM.
- Dedicated Starnote for Iridium reset and boot buttons.
- 4-layer FR-4 PCB, 1.59mm total thickness.
- PCB Dimensions: 74.11mm x 95.45mm
- Center of Mounting Holes: 70.3mm x 91.6mm (corners) and one additional hole 3.8mm from the left edge and 34.3mm from the bottom edge (measured from the edge of the PCB to the center of the furthest mounting hole)

Power Information

All Notecarriers can be powered by connecting directly to the USB port. However, most installations will not have USB power available, so several alternate power options are provided by the various Notecarrier models:

- attaching a LiPo battery.

The LiPo battery must be a single-cell 3.7V battery with a 2-pin JST PH connector.

- attaching a solar panel to the `SOLAR` connector (must be accompanied by a LiPo).

The solar charging circuit is designed for use with a 4.5-7V solar panel.

- applying 2.5-5.5VDC to the `VBAT` or `VMAIN` pins.

Commonly provided via DC power supply or non-rechargeable battery.

Warning

Typical USB ports may only be capable of supplying 500 mA of current, which might not be enough to power Notecard during a cellular connection to a GSM network (which can spike to 2A). In this situation, you're advised to supplement power to your Notecarrier with an external source (e.g. a LiPo battery).

GPS (GNSS) Antenna Requirements

All Notecarrier models are designed to support active GPS, and several Notecarrier models provide built-in antennas ready to be connected to a Cellular Notecard using the included u.FL cables.

Enabling Active GPS

Note

This section describes how to enable an active GPS antenna for Notecard, not Starnote. Blues Starnote supports passive GPS/GNSS antennas only.

If using Notecarrier XI v1.4 with an active GPS antenna, add a 0-0hm 0603 jumper to the unpopulated spot between `VGPS_OUT` and `VGPS_IN`. This will power an active GPS LNA with a 3.8VDC bias voltage on the center conductor of its GPS u.FL connector.

On Notecarrier XI, this unpopulated jumper spot is located on the back of the board.



Header Descriptions

Notecarrier XI v1.4 Dual 16-pin Headers

Pin Name	Direction	Usage		Usage	Direction	Pin Name
GND	IN	Ground		Direct connect to the + pin of the battery connector	IN/OUT	VBAT
AUX_TX	OUT	High-speed diagnostic interface		Direct connect to VUSB pin of the USB connector	IN/OUT	VUSB
AUX_RX	IN	High-speed diagnostic interface		Diode union of VUSB and VBAT sources	OUT	VMAIN
AUX_EN	IN	Enable diagnostics		Digital I/O voltage source with 100mA available	OUT	VIO
AUX4	IN/OUT	API-selectable modes of operation		Access to Notecard boot pin	IN	BOOT
AUX3	IN/OUT	API-selectable modes of operation		For development use only: MUST normally be NC or High Impedance and must never be pulled to GND. A VIO-level pulse of >250ms will reset the Notecard	IN	NRST

Pin Name	Direction	Usage		Usage	Direction	Pin Name
AUX2	IN/OUT	API-selectable modes of operation		Active LOW when charging attached LiPo	OUT	NCHG
AUX1	IN/OUT	API-selectable modes of operation		For On/Off switching of customer product. Leave NC or connect to a physical switch or Open Drain output. Notecard will be OFF if pulled to GND. Never apply positive voltage to this pin.	IN	EN
ATTN	OUT	Configurable interrupt signal		Active antenna GPS 3.8V from Notecard	OUT	VGPS_OUT
CTX	IN	Clear to transmit		Active antenna GPS bias voltage	IN	VGPS_IN
RTX	OUT	Request to transmit		Active LOW when ALTDUFU is active	OUT	IDLE
TX	OUT	UART serial transmit request interface		Allows Notecard to toggle host active LOW reset pin ALTDUFU	IN	NRST

Pin Name	Direction	Usage		Usage	Direction	Pin Name
RX	IN	UART serial receive request interface (Notecard has onboard 10K pull-up resistors)		Allows Notecard to toggle host BOOT pin ALTDFU	IN	BOOT
SCL	IN/OUT	I2C clock request interface (Notecard has onboard 10K pull-up resistors)		UART serial transmit request interface, specifically used to program the host MCU. ALTDFU	OUT	TX
SDA	IN/OUT	I2C data request interface (Notecard has onboard 10K pull-up resistors)		UART serial receive request interface, specifically used to program the host MCU. ALTDFU	IN	RX
GND	IN	Ground		Ground	IN	GND

Specifications

Electrical Characteristics

DC Characteristics

Description	Minimum	Maximum	Unit
Supply Voltage	2.5	5.5	V
Supply Current	500	2000	mA
Solar Input*	4.5	7	V

*Recommended solar panel voltage range. The solar input must be accompanied by a LiPo battery.

Absolute Maximum Ratings

Description	Minimum	Maximum	Unit
Storage temperature	-35	70	°C

Note

Actual values may vary based on local conditions such as atmospheric conditions and distance to the cell tower.

Ordering Information

- [Notecarriers](#)[↗]
- [Development Kits](#)[↗]

Design Files

Open source hardware designs for all Notecarriers are maintained in the [note-hardware](#) GitHub repository.

Here are the design files available for the **Notecarrier XI v1.4**:

- [Schematic](#) ([.pdf](#)) – the full circuit schematic. Use it to understand how the Notecard, Starnote connection, power, and I/O are wired together.
- [Bill of materials](#) ([.xlsx](#)) – every component with its reference designator and manufacturer part number. Use it to source parts or build your own board.
- [Fabrication drawing](#) ([.pdf](#)) – a dimensioned drawing with board outline, layer stack-up, and drill details for manufacturing and mechanical fit.
- [3D PDF](#) ([.pdf](#)) – an interactive 3D view of the assembled board you can rotate and inspect in Adobe Acrobat, no CAD software required.
- [3D model](#) ([.step](#) , [zipped](#)) – a STEP 3D model. Import it into mechanical CAD to check fit and design enclosures.
- [Pick-and-place](#) ([.txt](#)) – component centroid(X/Y/rotation) data used to program automated SMT assembly.
- [Fabrication package](#) ([folder](#)) – the complete manufacturing set: Gerbers, NC drill files, and an ODB++ export for sending to a PCB fabricator.
- [Altium project](#) ([folder](#)) – the complete, editable Altium Designer design (schematic sheets, PCB layout, and libraries). Open it in Altium to modify the design or generate your own outputs.
- [KiCad project](#) ([folder](#)) – the complete, editable KiCad design (schematic sheets, PCB layout, and libraries). Open it in KiCad to modify the design or generate your own outputs.

Board Errata

Terms and Conditions

Visit [Blues Hardware Terms & Conditions](#)[↗].

Revision History

Author	Date	Summary
Ray Ozzie	2019-2020	Document drafted
John Wiedey	2020	Various improvements
Sean Taylor	2020	Various improvements
Zachary J. Fields	01 OCT 2020	Updated information and translated to markdown
Brandon Satrom	04 JAN 2021	Added link to design resources
Greg Wolff	13 JAN 2021	Added BAT pin information to Notecarrier AF datasheet
Brandon Satrom	07 APR 2022	Added Notecarrier A information
Zachary J. Fields	20 JUL 2022	Added Notecarrier F information
Zachary J. Fields	24 OCT 2022	Added Notecarrier B v2 information
Rob Lauer	28 OCT 2022	Added versioning for Notecarrier B v1/v2
TJ VanToll	05 JAN 2023	Added Notecard Outboard Firmware Update information
Rob Lauer	28 FEB 2023	Re-labeling Notecarrier B as "Basic"

Author	Date	Summary
Rob Lauer	01 MAR 2023	Added PCB/Mounting Hole Dimensions
Rob Lauer	07 SEP 2023	Added Notecarrier F v1.3 information
Rob Lauer	16 NOV 2023	Added Notecarrier Pi v2.0 information
Rob Lauer	14 MAR 2024	Added Notecarrier B v3.1 and Notecarrier R v1.0 information
Rob Lauer	05 JUN 2024	Added Notecarrier XS v1.1 information
Rob Lauer	10 JUN 2024	Added KiCad schematics to A, B, F, and Pi Notecarriers
Rob Lauer	18 JUL 2024	Added Notecarrier XS v1.2 information
Rob Lauer	22 JUL 2024	Updated Notecarrier pin descriptions
TJ VanToll	19 AUG 2024	Added Notecarrier X v1.2, XM 1.2, and XP 3.1 information
Rob Lauer	14 JAN 2026	Added Notecarrier CX v1.3 information
Rob Lauer	11 FEB 2026	Added Notecarrier A v2.3 information
Rob Lauer	22 MAY 2026	Added Notecarrier CX v1.7 information

Author	Date	Summary
Rob Lauer	11 JUN 2026	Added Notecarrier XI v1.4 information
Rob Lauer	16 JUL 2026	Corrected Notecarrier XI DC specifications and Starnote for Iridium antenna details
Rob Lauer	03 AUG 2026	Add newly updated KiCad schematics

Contact Information

Blues Inc.

<https://blues.com> 

50 Dunham Ridge Suite 1650

Beverly, MA 01915

support@blues.com 

Can we improve this page? [Send us feedback](#)